



PATHFINDER SE KIT

Web Manual

PATHFINDER SE KIT

SMARTER WAY TO MAP, TRACK & TRAIN

Web Manual

Please read this manual thoroughly before
operating the PATHFINDER SE KIT.

CONTENTS

PACKAGE CONTENTS	3
OVERVIEW	4
GETTING STARTED	6
CUSTOMIZED FUNCTIONS FOR PATHFINDER	7
1. PTT BUTTON	8
2. BACK BUTTON	9
3. VOLUME BUTTONS	9
ADDITIONAL FEATURES	10
RETURN POLICY	11
WARRANTY	11

PACKAGE CONTENTS



CAT® Phone
(S48c or S61)



PATHFINDER
(or PATHFINDER MINI)



Wearable carrying
holster

OVERVIEW

PATHFINDER COMES WITH SPECIAL EDITION RECEIVER WITH BEACON & LOCATE LED LIGHT

* Check PATHFINDER manual to see details and how to charge the device.



CAT® PHONE SET UP FOR PATHFINDER

* Customized for PATHFINDER with quick access operation buttons.

** Thermal imaging camera is only available on S61 model only.

*** When the display is off, double click the “Home” circle button to turn on the device.



To use the PATHFINDER app as shown above on the CAT® Phone device, please follow the following steps.

1. Programmable Key (PTT Key):

- PATHFINDER app: program as quick access button to open and use PATHFINDER app
- Depending on the setting in the app, the PTT will apply Nick or Constant stimulation, Tone, or Locate signal

2. Back Button:


- PATHFINDER app: press to toggle between Map, Compass, E-Collar tabs
- Press to go to previous screen

3. Volume Keys:

- PATHFINDER app: depending on setup, “Map zoom” will zoom in and out of map or “Collars” will select between paired receivers

GETTING STARTED

APP DOWNLOAD

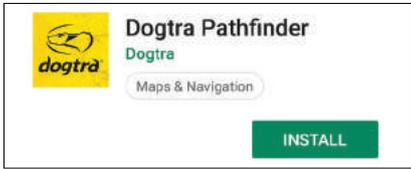


Go to **Google Play** or the **CAT Toolbox app** to find and download the Dogtra PATHFINDER app.



PHONE SETTING

To use the PTT button, please follow these steps.

1. Go to “Programmable key” page under ‘Setting’ on the phone.
2. Turn off the ‘PTT Mode’.
3. Click “Short press” and find and select the ‘PATHFINDER’ app.
4. Click “Long press” and find and select the ‘PATHFINDER’ app.

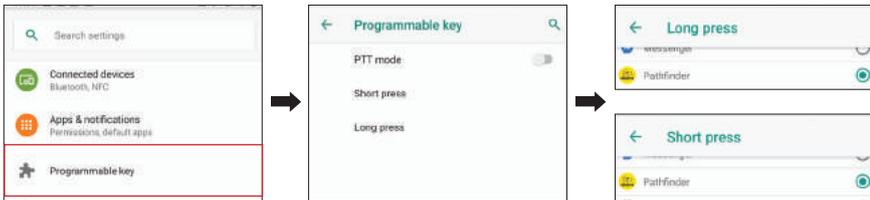

PAIRING THE PATHFINDER

PATHFINDER GPS connector connects between your smartphone and PATHFINDER GPS receiver. These devices need to be paired for the PATHFINDER system to work properly.



CAT® Phone pairing with connector

- 1) PATHFINDER app >Settings > Bluetooth Pairing > Start Pairing.
- 2) Turn on the GPS connector > Click ‘SELECT’ button to select ‘PHONE.’
- 3) Hold ‘CONNECT’ on the GPS connector until the LED light starts blinking rapidly. The light will stop blinking when paired.




Receiver pairing with connector

- 1) Turn the receiver off. Press and hold the power button on the receiver until you hear a melodic sound.
- 2) Turn on the GPS connector > Click ‘SELECT’ button to select ‘COLLAR.’
- 3) Hold ‘CONNECT’ on the GPS connector until the LED light starts blinking rapidly. The receiver will emit 3 short beeps and the light will stop blinking when paired.

CUSTOMIZED FUNCTIONS FOR PATHFINDER

	On the PATHFINDER app		On other pages while PATHFINDER app is running in the background	
	SHORT PRESS	LONG PRESS	SHORT PRESS	LONG PRESS
1. PTT BUTTON 	On the main page: Map/Compass/E-Collar Apply brief Constant stimulation, Tone, or Locate signal (Nick setup sends one-time Nick stimulation only)	On the main page: Map/Compass/E-Collar Apply on-going Constant stimulation, Tone, or Locate signal (Nick setup sends one-time Nick stimulation only)	Back to the PATHFINDER app	Back to the PATHFINDER app & apply on-going Constant, Tone, or Locate signal (Nick setup sends one-time Nick stimulation only)
	Subpages Back to the last tab on the main page & apply one-time Nick stimulation signal	Subpages Back to last tab on the main page & apply on-going Constant, Tone, or Locate signal		
2. BACK BUTTON 	On the main page: Map/Compass/E-Collar Rotate between tabs	On the main page: Map/Compass/E-Collar Quit the PATHFINDER app	Back to the previous screen	
	Subpages Back to the last tab on the main page	Subpages Back to the last tab on the main page		
3. VOLUME BUTTONS 	On the main page: Map/E-Collar Depending on setup, "Map zoom" will zoom in and out of map or "Collars" will select between paired receivers	System volume	System volume	

1. PTT BUTTON

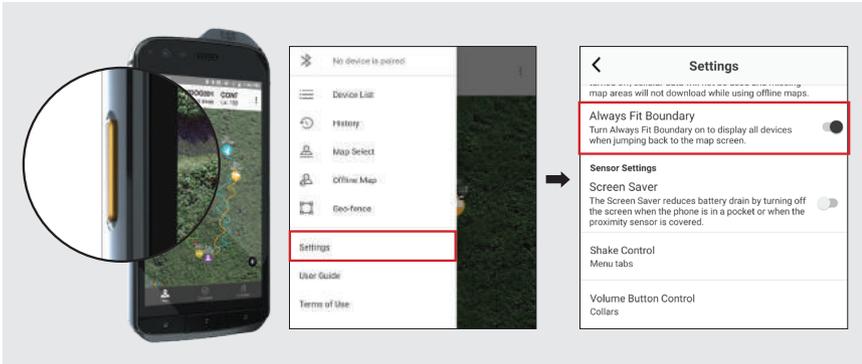

Turn on the mode to use the PTT button as following:


On the PATHFINDER app		On other pages while PATHFINDER app is running in the background	
SHORT PRESS	LONG PRESS	SHORT PRESS	LONG PRESS
<p>On the main page: Map/Compass/E-Collar</p> <p>Apply brief Constant stimulation, Tone, or Locate signal (Nick setup sends one-time Nick stimulation only)</p>	<p>On the main page: Map/Compass/E-Collar</p> <p>Apply on-going Constant stimulation, Tone, or Locate signal (Nick setup sends one-time Nick stimulation only)</p>	<p>Back to the PATHFINDER app</p>	<p>Back to the PATHFINDER app & apply on-going Constant, Tone, or Locate signal (Nick setup sends one-time Nick stimulation only)</p>
<p>Subpages</p> <p>Back to the last tab on the main page & apply one-time Nick stimulation signal</p>	<p>Subpages</p> <p>Back to last tab on the main page & apply on-going Constant, Tone, or Locate signal</p>		

You can disable the PTT button feature here if you want to turn it off for safety reasons.

Please note PTT buttons will not operate on following occasions even if the feature is activated:

- No device is paired
- Selected a shared device
- Selected SPOT marker
- Selected ME marker
- E-Collar tab is locked
- Track-only mode


2. BACK BUTTON

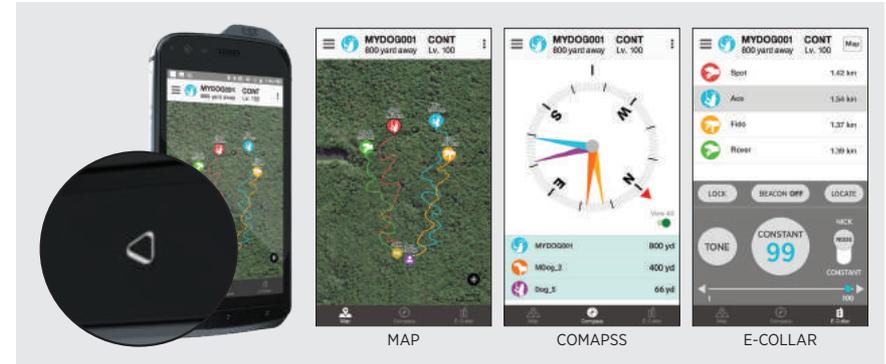

“Back” button function is customized to be used as ‘Main page’ button.

- On the main page, use it to toggle between Map, Compass, and E-Collar tabs.
- On thea it go straight to the last main page.
- Press and hold to quit the app.

3. VOLUME BUTTONS

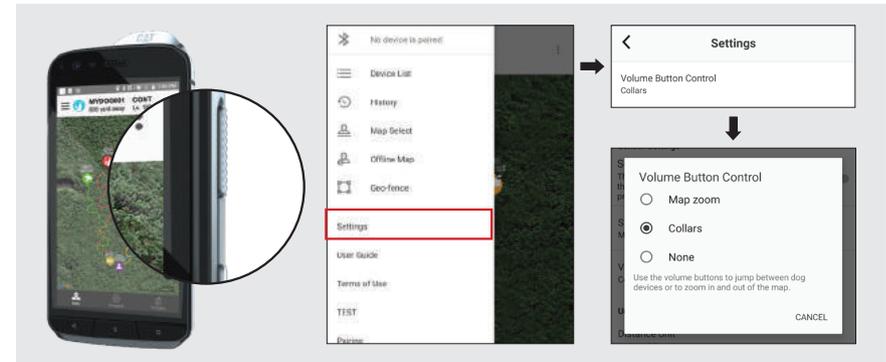

Select the mode you wish to use the volume buttons for.


- Select “Map zoom” to zoom in and out via volume buttons
- Select “Collars” to select between paired receivers
- Select “None” to not use the feature

ADDITIONAL FEATURES



With the device turned on, use the PTT button on any other screen to go straight to the PATHFINDER app.


You can also disable the lock screen to skip this step all together.

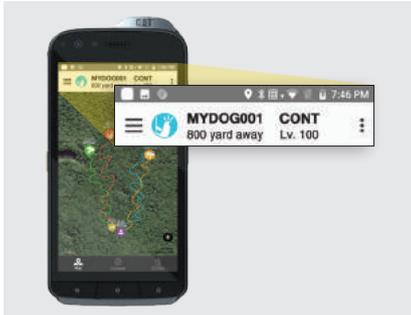

Receiver status bar on the top of the app screen shows the selected receiver's set up and distance from you.



When the display is off, double click the "Home" circle to turn on the device.

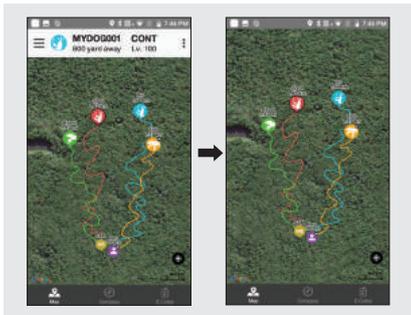

Tap the screen once to hide the mode titles at the bottom. Tap the screen twice to zoom in on the map.

This function will not work on the E-Collar or Compass tabs.

RETURN POLICY

Return Policy

Customers may return both devices (cannot return separately) within 30 days from the date of purchase for a refund. No refunds or returns will be accepted after 30 days from the date of purchase.

All products returned must include a proof of purchase, original packaging, and all contents must be in "like-new" condition.

Refund amounts exclude shipping charges or any other add-on charges to and from the customer's location.

Attention!

This is a special bundle pack and parts cannot be resold separately. The warranty will be voided if sold separately and the serial number will be invalid.

PATHFINDER 2 YEAR WARRANTY

In order to qualify, you'll need:

1. Proof of purchase
2. Both product boxes and serial numbers for the Dogtra e-collar and CAT® smartphone

REGISTER ONLINE AT: www.dogtra.com/product-registration

For warranty services and repair after 30 days from the date of purchase on the Dogtra e-collar, please contact Dogtra at (888) 811-9111 or visit www.dogtra.com/support.

CAT® SMARTPHONE 2 YEAR WARRANTY

The warranty activation date and covered period of the Dogtra warranty will equally apply to the bundled CAT® smartphone. For warranty services and repair after 30 days from the date of purchase on the CAT® smartphone, please contact CAT® at (646) 568-9682 or visit <http://www.catphones.com/en-us/help-support/>.



Please **keep your proof of purchase and both product boxes** in order to verify your warranty coverage period.